
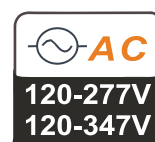


Specification of Wall Pack with glass cover

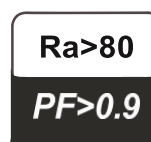

A variety of drivers are available

Using an isolated, 0-10V dimmable.


Protection level: Wet Location

The wall pack is sealed by silicone ring that can avoid dust completely and be waterproof, also the internal level ensures that the installation is horizontal.



silicone
ring

Product Dimension

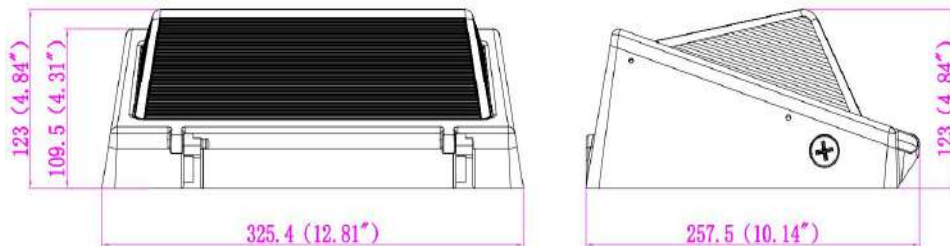

Input Voltage: AC120-277/347V

Option Input Voltage: 480V

Model: 385X2-100WP 120-277V


385X7-100WP 480V

Optional Battery Backup:

385X2-60WPEB 120-277V


Lighting Parameters

Power	60W	80W	100W
Rate Current	0.55A	0.734A	0.917A
Working Voltage	AC120-277V		
Wattage abjutstable	20-100%		
Beam Angle	70*110°		
Color Temperature	3500K、4000K、5000K		
lamp's Luminous Efficiency	> 135lm/W		
Color Rendering Index	Ra > 80		
Operating Temperature	-40°F ~ +104°F		
Storage Temperature	-40°F ~ +158°F		
Environment Location	Wet Location		
Life-span	≥50000H		
Materials	ADC12		
The color of the lamp shell	Brown		
Mounting	Bracket fixed		

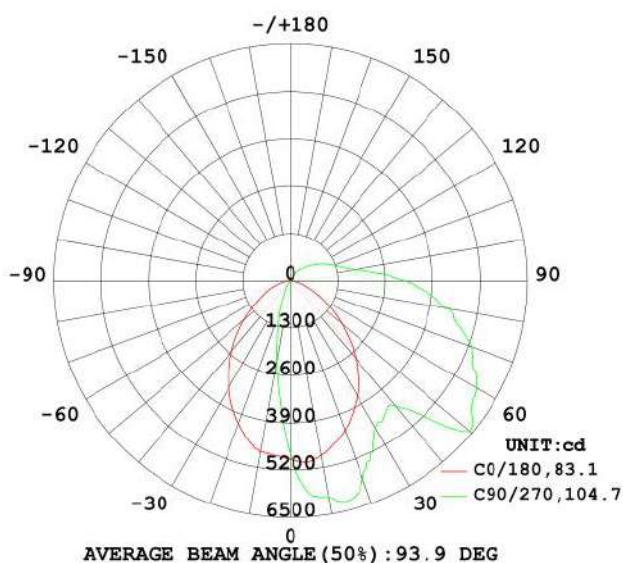


Installation Instruction


1. Remove the rubber plug.

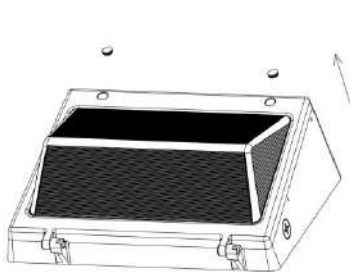


2. Remove the screws from the top cover.

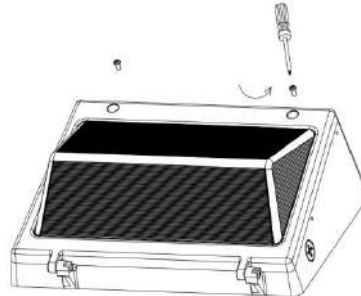


3. Open the lid.

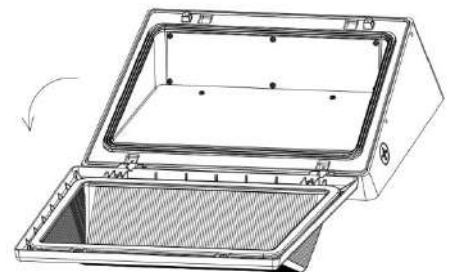


4. Remove the reflector.

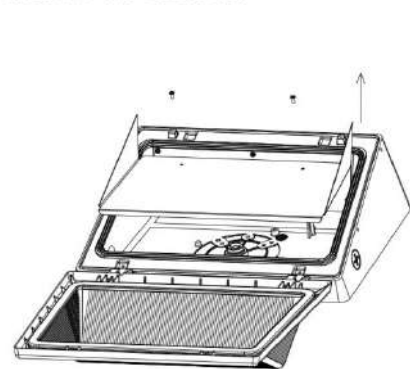


5. Fixed according to traditional installation method.

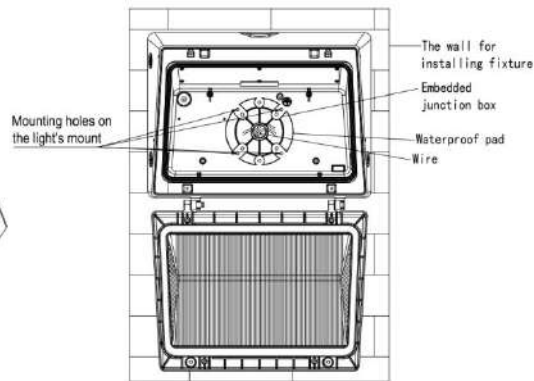


6. Connect the mains supply to the drive harness as shown in the figure.

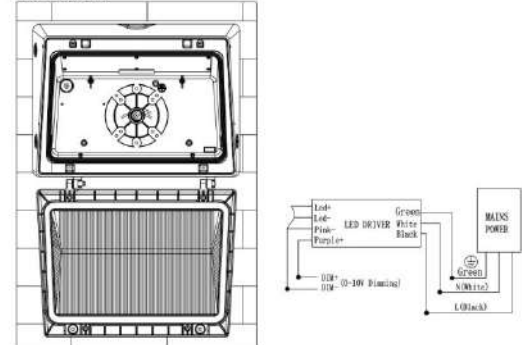


7. Installing the reflector.

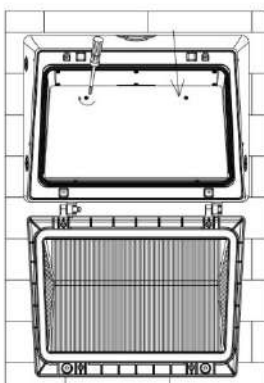

8. Install the cap screws and rubber plugs.

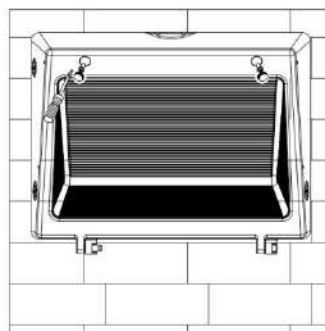

9. Installation completed.

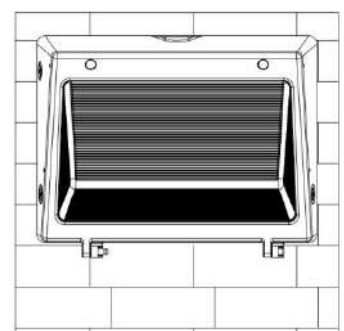

Applications



Safety Information

- 1、Using the standard working voltage: AC120~277V, 50/60Hz, do not exceed.
- 2、Be sure the power supply is turned off before installation.
- 3、Switch off power of the mains supply or the connection lead respectively before doing any works.
- 4、Please note waterproof, dustproof, electricity prevention and shockproof for the external power wires.
- 5、Directly fix bolts on the installation stem through the hole on the mounting bracket.
- 6、Be sure the connection between the wires is in good condition when install the lamps, beware of leakage.
- 7、Please read the specification carefully before installation.
- 8、The complete installation must be handled by an electrical expert